


Connecting TF5000CIP satellite receiver to the linear actuator

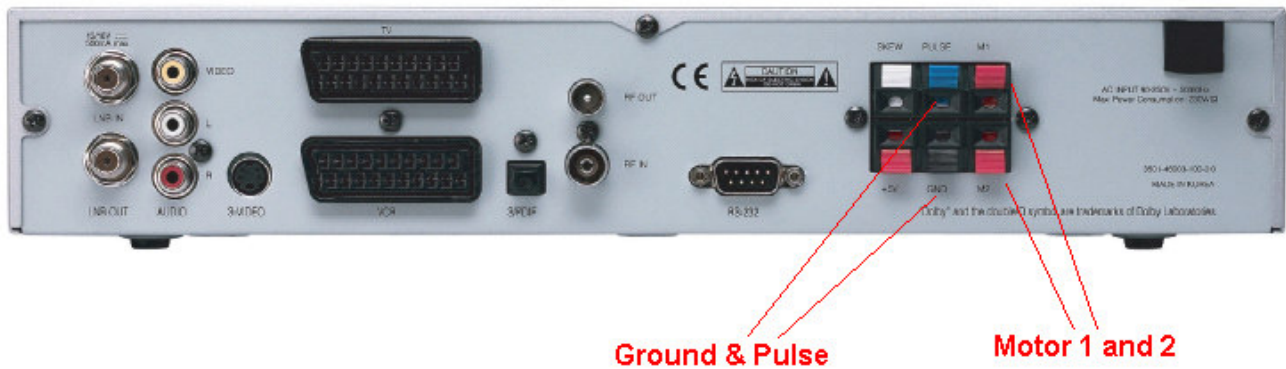

Standard 2.5mm mains cable is suitable to connect the TF5000CIP or another positioner to the linear actuator.

Connect the Motor 1 & 2 (labeled M1 & M2) to the big white and blue wires under the cover on the linear actuator. These are the motor wires. It does not matter which way around they are connected. However if you find the dish moves in the opposite direction to which it should, you will need to reverse the wires. This is dependant on which side of the dish you mount the actuator. Either is fine.

Connect the Ground & Pulse (labeled GND & Pulse) to the small yellow and black wires under the cover on the linear actuator. Either way around is fine.